



# AMERICAN FORCE

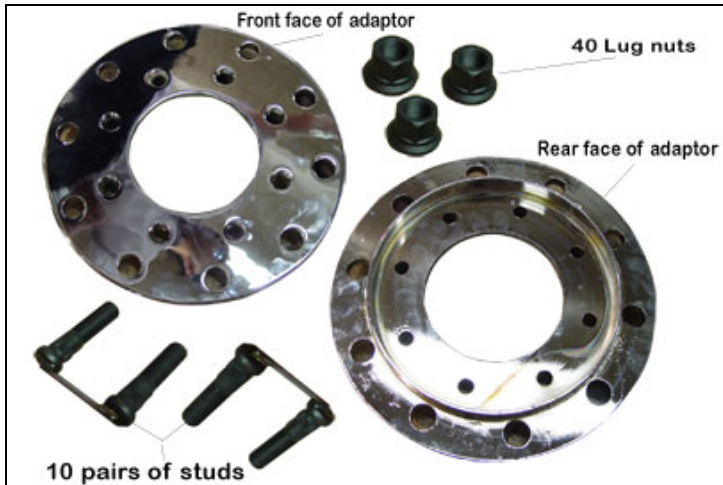

## Installation Instructions for:

2005-11 Ford F350 Dually  
Part# AFZT142R  
(rear pair tuck adaptors)

\*These adaptors do not work with standard wheels. Wheels must be modified to work correctly.

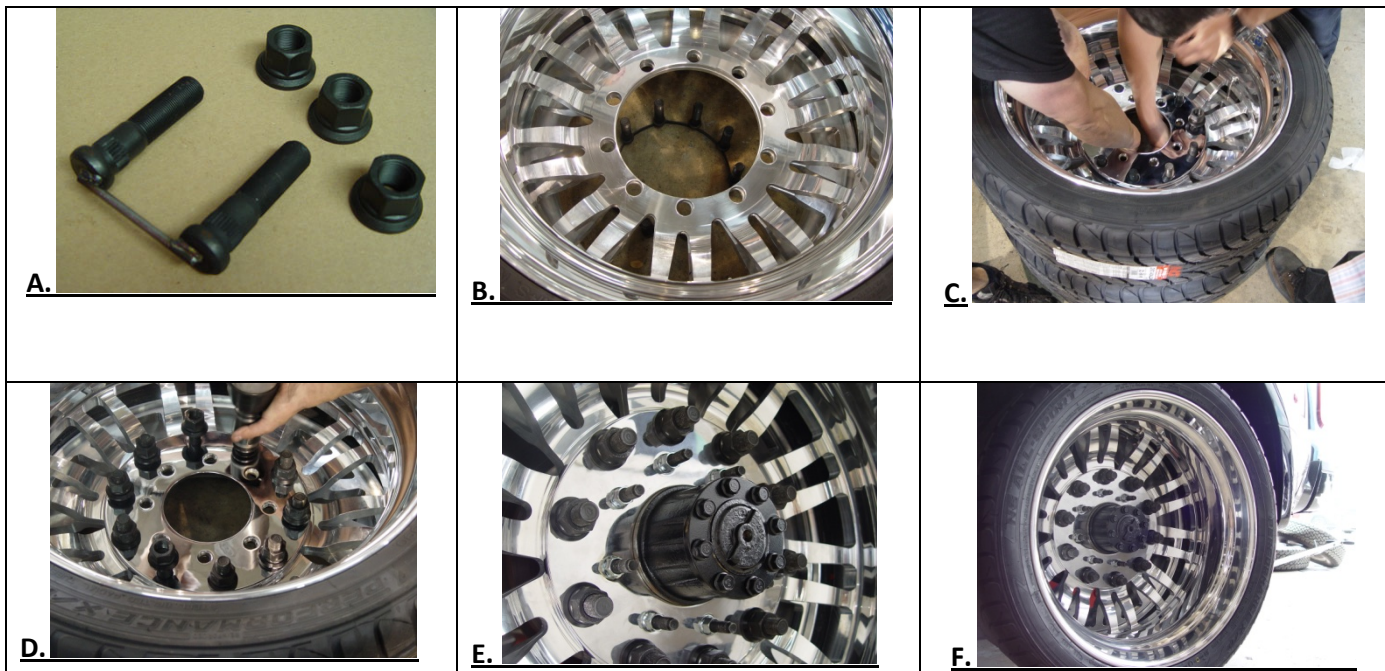

### American Force recommends professional installation on all of our products

The best place to find the correct procedure for tire and wheel removal is in the owner's manual for your vehicle. While using a standard jack we recommend lifting one corner of the truck at a time and always use jack stands to support the truck while working on it.

#### Step 1: Assemble the Dual Rear Wheels

- Place the studs for the 10 lug on the floor and remove the lug nuts (step A).
- stack the dual wheel assembly on top of the lug studs, align and center the holes (step B)
- place the chrome adaptor plate into the center of the dual wheels, **flat face up** (step C)
- Using an air gun or torque wrench, pull the wheel studs through the holes and tighten them down with the lug nuts.

**Step 2: Install the Dual wheel assembly onto the trucks rear hub**

-With all 10 lugs securely tightened to the adaptor, place the dual wheel assembly onto the factory hub with the flat part of the adaptor facing out.

-Using an air gun or torque wrench, torque the small 8 lug nuts to 140lbs on to the hub assembly.

-After tightening all 8 small lug nuts to the hub, inspect the installation.

-Make sure the wheel is sitting secure and flush with the hub of the truck.

**Repeat each step for the opposite side of the truck.**

**If you have any questions, contact your sales representative.**

**Ph: 786-345-6301 Fax: 786-345-6398 [www.AmericanForceWheels.com](http://www.AmericanForceWheels.com)**